


INSTALLATION INSTRUCTIONS

PARTS LIST

1 - Bow Canopy Frame
1 - Bow Canopy
1 - Aft Canopy Frame
1 - Aft Canopy
1 - Aft Canopy Boot
4 - Black Delrin Adapter
8 - Self-Tapping Screws

TOOLS REQUIRED

Measuring Tape
Center Punch
Drill
1/8" Drill Bit
Pencil
Phillips Screwdriver

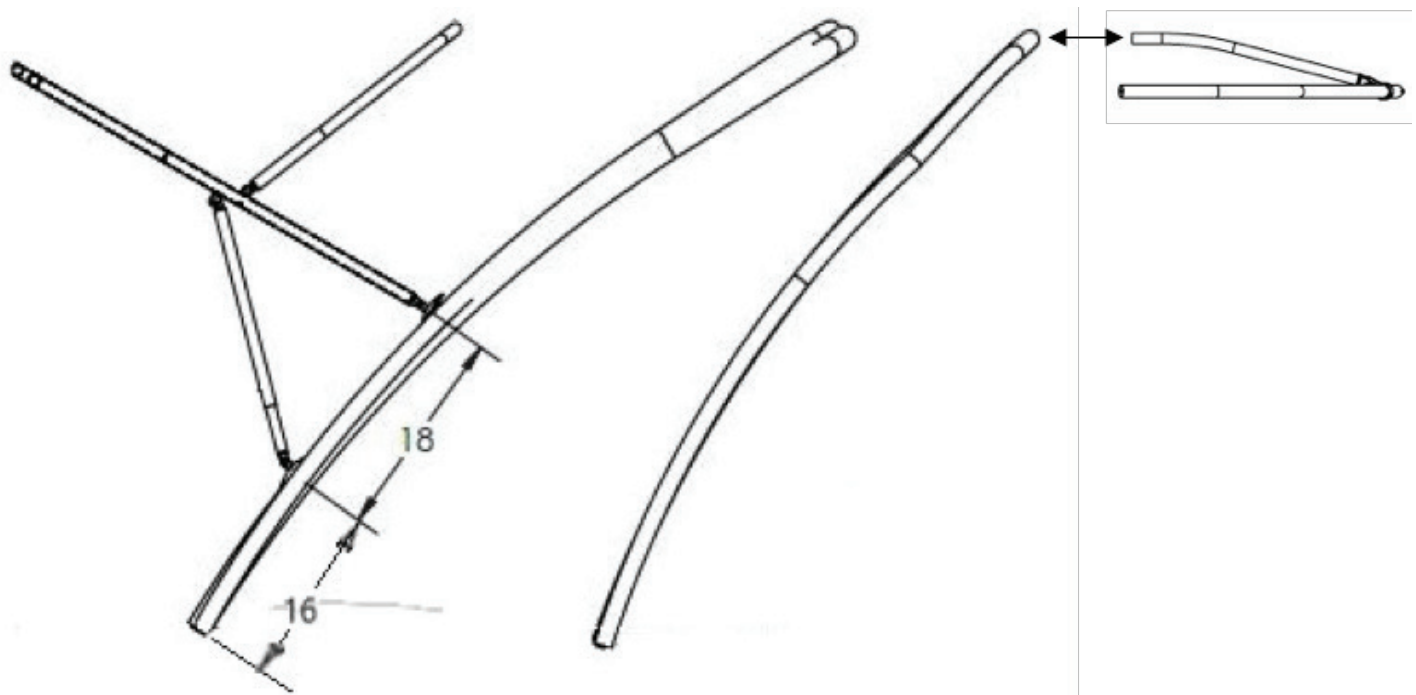

BRACKET LOCATIONS & ASSEMBLY:

STEP 1

Mount Bracket location (A). Measure and place a mark on the Wake Tower 16" from the Wake Tower mount hole. Mount Bracket location (B). Measure and place a mark on the Wake Tower 18" from Mount Location (A).

STEP 2

Center the brackets at each mark and transfer the centers of each hole on to the Wake Tower tube with a center punch.

STEP 3

Using a 1/8" drill bit, drill holes completely through the top of Wake Tower tube.

STEP 4

Replace the brackets and secure using a Phillips screwdriver and self tapping screws.

STEP 5

Follow the same procedure for the other side.



MOUNTING BOW FRAME AND CANOPY:

STEP 1

Place the Bow Canopy over the Bow Frame and zip the forward pockets onto the Bow Frame.

STEP 2

Insert Hold Down Arms on Bow Frame into the 3/4" sockets in the Wake Tower on the boat.

STEP 3

Pull the Bow Canopy back and zip the aft pockets around the Wake Tower to secure.

STEP 4

Place the adjustable straps around the Wake Tower horizontal bars, snap together and pull to tighten.



MOUNTING THE AFT FRAME AND CANOPY:

STEP 1

Install the SlideLock studs on the Aft Frame Main Bow into the brackets installed on the Wake Tower.

STEP 2

Zip the forward edge of the Aft Canopy to the Bow Canopy previously installed on the Wake Tower.

STEP 3

Place the canopy over the frame and zip the pockets over the Main Bow.

STEP 4

Open the canopy and zip the mid pocket around the Auxillary Bow on the frame.

STEP 5

Attach the Aft hold down arms to the brackets on the Wake Tower and adjust for fit as needed.



MOUNTING THE AFT BOOT:

STEP 1

Unzip the aft Canopy from the Bow Canopy.

STEP 2

Zip the Boot to the Bow Canopy previously installed on the Wake Tower.

STEP 3

Place the canopy and frame forward within the Boot.

STEP 4

Zip the Boot around the frame and Canopy.

STEP 5

Secure the Aft hold down arms to the clips on the Frame.